
# AEB1750 SECURITY ESCUTCHEON SET FITTING INSTRUCTIONS



### **Parts List**

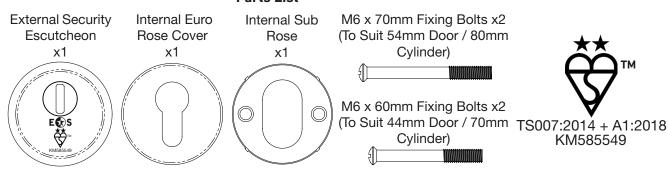

## Installation:

- Ensure lock & cylinder are fitted centrally & securely to door
- 2. Ensure lock case has 38mm c/c bolt through holes at cylinder cut out area
- 3. Mark either side of cylinder from both sides of door at 38mm centres for door drilling
- 4. Remove cylinder & lock from door
- 5. Drill 2 x 7mm holes at 38mm centres from each side of door
- Re-fit lock & cylinder
- 7. Place external escutcheon over outside face of cylinder
- 8. Place internal sub rose over inner face of cylinder & fix using 2 bolts to suit door thickness
- 9. Place internal rose cover over cylinder & sub rose and push to fit

Note: Cylinder with Thumb Turn may need to be removed prior to internal roses being fitted

#### **User information:**

This security hardware offers additional defence to several types of attack. However, to ensure enhanced resistance to all commonly used attack methods, this product MUST be used in conjunction with a one star or three star cylinder meeting TS 007 to ensure security.

## Important information:

This product is suitable for Wooden and Composite doors only. It has not been designed or tested to be used on UPVC type doors.

Minimum classification from EN 1906 required:								Security Hardware Model:	AEB1750
1	6	-	-	-	3	-	-	Achieved (Note 3 applies)	
Note 3:			This product falls outside the scope of undergone an evaluation in accordance standard in line with requirements staticlause 4.3.					e with the intent of the	

FITCB0049 | Revision C



**+**44 1228 511030

🖾 Carlisle Brass Ltd, Parkhouse Road, Carlisle, CA3 0JU

enquiries@carlislebrass.com

www.carlislebrass.com

**ABCOO**