


We recommend consulting a professional if you are unfamiliar with installing hardware fixtures.

- For the **M38S**, at your desired height, centrally located on the door, mark the position for the **fixing hole A**. 95mm vertically below, mark **fixing hole B**.
 - For the **M38B**, at your desired height, centrally located on the door, mark the position for the **fixing hole A**. 125mm vertically below, mark **fixing hole B**.

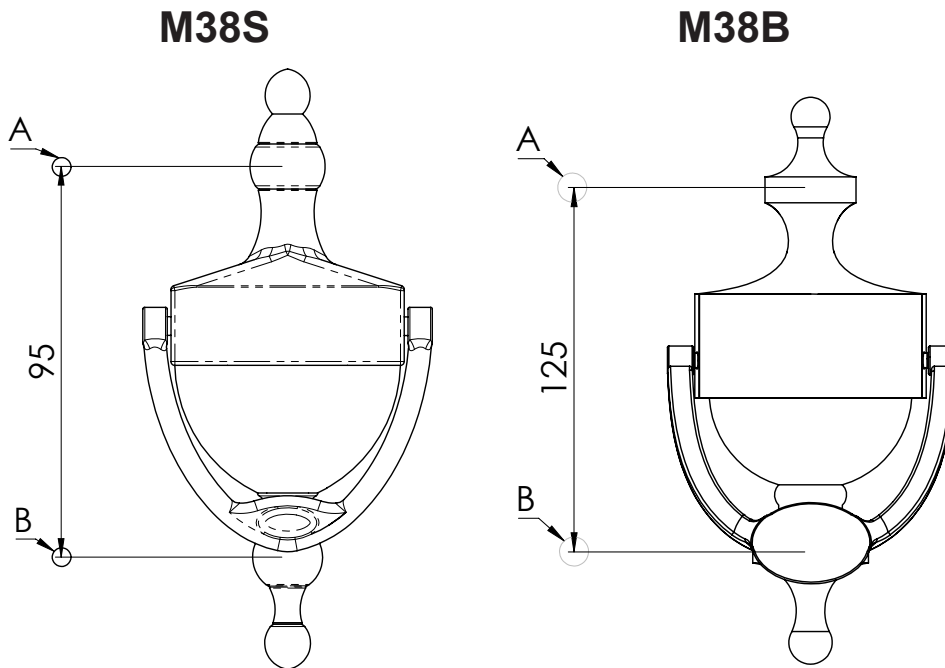

- Using a **6mm drill bit**, carefully drill straight through the door at selected position for **holes A & B**.
- Hold the knocker straight against the front of the door and tighten the threaded bar into the knocker until the entire assembly is secure.

Drawings are not to scale.

FITCB0090 | Revision A