

To fit Little Fingers Slimline finger protection for doors follow the simple instructions below:

- 1 Measure the height of the door. Allow a 10mm gap at the top and bottom of the door, then trim the finger protector to suit (see fig 1)
 - 2 With the door shut, draw a pencil line down the door face 20mm from the door stop (see fig 2)
 - 3 Remove the self-adhesive tape from Profile A and fix to the door stop, along the edge abutting the door (see fig 3)
 - 4 Using the pre-drilled holes, fix Profile A with the screws provided (see fig 4)
 - 5 Remove self-adhesive tape from Profile B and, allowing the outside edge to sit on top of the pencil line, fix to the door (see fig 5)
 - 6 Using the pre-drilled holes, fix Profile B with the screws provided (see fig 6)
 - 7 Make a final check to make sure the door opens/closes fully without obstruction (see fig 7).
- Each pack contains:**
1 x 1950mm finger protection device, including fixing screws.

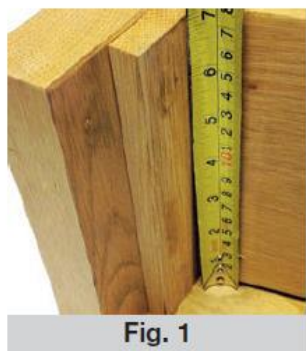


Fig. 1

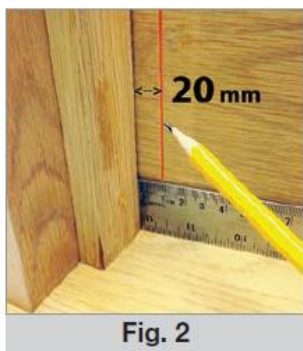


Fig. 2

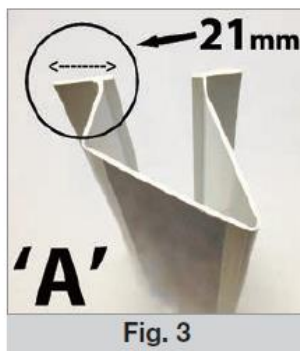


Fig. 3



Fig. 4

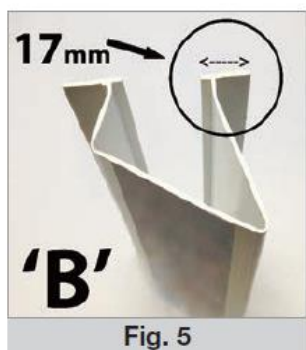


Fig. 5



Fig. 6



Fig. 7