

To fit Little Fingers Slimline rear hinge cover follow the simple instructions below:

- 1 Clean the door and frame thoroughly. Measure the height of the door. Allow a 10mm gap at the top and bottom of the door and trim the finger protector to suit
 - 2 With the door shut, draw a pencil line down the door 5mm in from the hinge (see fig 1)
 - 3 Remove the self-adhesive tape from 'L' shaped Profile A (see fig 2)
 - 4 Fix to the door along the pencil line. For high pedestrian traffic areas, it is advisable to secure the hinge cover with screws (see fig 3)
 - 5 Remove the self-adhesive tape from the 'T' shaped profile (see fig 4)
 - 6 Wrap the cover around the hinge and secure to the door frame. For high pedestrian traffic areas, it is advisable to secure the hinge cover with screws (see fig 5)
 7. Make a final check to ensure that the door opens/closes fully without obstruction (see fig 6)
- Each pack contains: 1 x Channel.**



Fig. 1

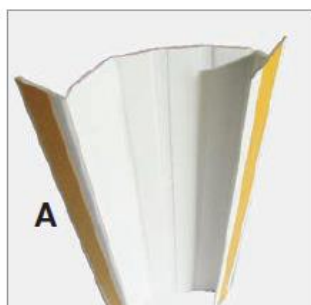


Fig. 2



Fig. 3

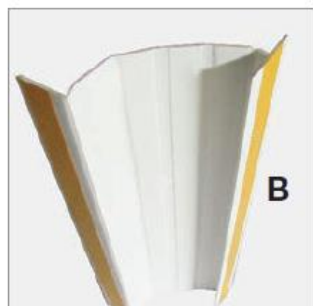


Fig. 4



Fig. 5



Fig. 6